



Shelving Options


Rapini Shelving Options

Rapini delivers an easy and economical way to solve a variety of storage, supply management and inventory control issues with Static and Mobile Wire Shelving Systems.

Available in shelving, carts or high density in-line systems the Rapini range will maximise your floor space usage and improve your inventory supply flow.

Nickel Chrome Wire Shelving

Nickel chrome wire shelving is best suited to dry areas, and in particular for sterile hospital environments, where cleanliness and freedom from dust gathering is critical. Rapini's nickel chrome wire shelves comply with hospital infection control guidelines - as per AS 4187

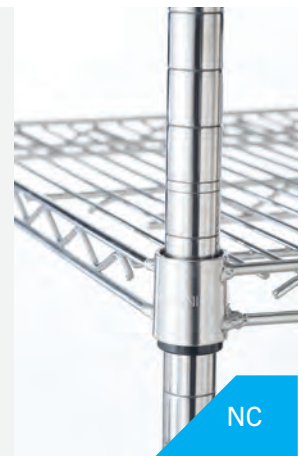

NC

Stainless Steel Wire Shelving

Stainless steel wire shelving is suitable for wet storage and high contamination areas, such as clean rooms and sterile hospital environments where cleanliness and freedom from dust gathering is critical.



SS

Stainless Steel Solid Shelving

Stainless steel solid shelving has unlimited applications. Stainless steel sheet construction, makes it very serviceable in all conditions.



SD

Cool Seal Wire Shelving

Zinc plated, epoxy coated wire shelving is specially designed for both wet and dry storage areas. Particular application is cool rooms, freezers, hotels, restaurants and hospital kitchens.



ZP

NICKEL CHROME WIRE		NC	STAINLESS STEEL WIRE		SS	STAINLESS STEEL SOLID		SD	COOL SEAL		ZP
Size (mm)	Code		Size	Code		Size	Code		Size	Code	
WIRE SHELF SIZES											
355 Width											
355 x 760	S1430NC										
355 x 910	S1436NC										
355 x 1070	S1442NC										
355 x 1220	S1448NC										
355 x 1372	S1454NC										
355 x 1525	S1460NC										
355 x 1828	S1472NC										
460 Width											
460 x 460	S1818NC										
460 x 610	S1824NC										
460 x 760	S1830NC	460 x 610	S1824SS	460 x 610	S1824SD	460 x 610	S1830SD	460 x 610	ZP1824		
460 x 910	S1836NC	460 x 760	S1830SS	460 x 760	S1830SD	460 x 760	S1836SD	460 x 760	ZP1830		
460 x 1070	S1842NC	460 x 910	S1836SS	460 x 910	S1836SD	460 x 910	S1842SD	460 x 910	ZP1836		
460 x 1220	S1848NC	460 x 1070	S1842SS	460 x 1070	S1842SD	460 x 1070	S1848SD	460 x 1070	ZP1842		
460 x 1372	S1854NC	460 x 1220	S1848SS	460 x 1220	S1848SD						
460 x 1525	S1860NC	460 x 1372	S1854SS	460 x 1372	S1854SD						
460 x 1828	S1872NC	460 x 1525	S1860SS	460 x 1525	S1860SD						
533 Width											
533 x 610	S2124NC										
533 x 760	S2130NC							533 x 760	ZP2130		
533 x 910	S2136NC							533 x 910	ZP2136 SHELF		
533 x 1070	S2142NC							533 x 1070	ZP2142		
533 x 1220	S2148NC										
533 x 1372	S2154NC										
533 x 1525	S2160NC										
533 x 1828	S2172NC										
610 Width											
610 x 610	S2424NC	610 x 610	S2424SS					610 x 610	ZP2424		
610 x 760	S2430NC	610 x 760	S2430SS	610 x 760	S2430SD	610 x 760	S2436SD	610 x 760	ZP2430		
610 x 910	S2436NC	610 x 910	S2436SS	610 x 910	S2436SD	610 x 910	S2442SD	610 x 910	ZP2436		
610 x 1070	S2442NC	610 x 1070	S2442SS	610 x 1070	S2442SD	610 x 1070	S2448SD	610 x 1070	ZP2442		
610 x 1220	S2448NC	610 x 1220	S2448SS	610 x 1220	S2448SD						
610 x 1372	S2454NC	610 x 1372	S2454SS								
610 x 1525	S2460NC	610 x 1525	S2460SS	610 x 1525	S2460SD						
610 x 1828	S2472NC										
POSTS (Height mm)											
860	P34C	860	P34SS	860	P34SD						
1370	P54C	1370	P54SS	1370	P54SD						
1600	P63C	1600	P63SS	1600	P63SD	1600			ZP63P		
1800	P70C	1800	P70SS								
1895	P74C	1895	P74SS	1895	P74SD	1895			ZP74P		
2232	P80C	2032	P80SS	2200	P86SD						
WIRE LEDGES											
100mm High		(L x H)	100mm High	(LxH)							
355 x 100	AL14C										
460 x 100	AL18C	460 x 100	AL18SS								
533 x 100	AL21C										
610 x 100	AL24C	610 x 100	AL24SS								
760 x 100	AL30C	760 x 100	AL30SS								
910 x 100	AL36C	910 x 100	AL36SS								
1070 x 100	AL42C	1070 x 100	AL42SS								
1220 x 100	AL48C	1220 x 100	AL48SS								
1372 x 100	AL54C	1372 x 100	AL54SS								
1525 x 100	AL60C	1525 x 100	AL60SS								
1828 x 100	AL72C										
280mm High		(L x H)									
355 x 280	AL14-280C										
460 x 280	AL18-280C										
533 x 280	AL21-280C										
610 x 280	AL24-280C										
760 x 280	AL30-280C										
910 x 280	AL36-280C										
1070 x 280	AL42-280C										
1220 x 280	AL48-280C										
1372 x 280	AL54-280C										
1525 x 280	AL60-280C										
1828 x 280	AL72-280C										
WIRE SHELF DIVIDERS											
220mm High		(L x H)	220mm High	(L x H)							
355 x 220	D14C										
460 x 220	D18C	460 x 220	D18SS								
533 x 220	D21C	533 x 220	D21SS								
610 x 220	D24C	610 x 220	D24SS								

Rapini Shelving Options

Rapini shelving, provides complete flexibility, so that our customers can achieve the most efficient storage solutions possible. We offer a no obligation, professional planning consultancy, to assist in optimising storage efficiencies.

We can offer an assembly and installation service if requested.

Shelf sizes

Rapini offers an expansive range of shelf sizes

Adjustability

Shelves are adjustable and can be easily repositioned with the use of the two piece sleeve which is set at 25mm increments.

Different heights

Six standard Post heights enable Rapini to adapt to most requirements.

Accessories

A large range of accessories is available to complement all shelving layouts (refer accessories – over).

Mobile or static - with or without wheels

- Mobile shelving units are supplied with 125mm castors, 2 of which come with brakes.
- Static shelving units are supplied with adjustable feet to accommodate uneven floors.

R1001 | Static 4 Shelf Unit

460 x 1525 x 1600mm (D x W x H)



R1201 | Mobile 4 Shelf

460 x 1525 x 1760mm (D x W x H)



R1101 | Static 5 Shelf

460 x 1525 x 1600mm (D x W x H)



R1301 | Mobile 5 Shelf

460 x 1525 x 1760mm (D x W x H)






R2001 | Combination Trolley

Size illustrated: 900 x 610 x 1760H mm

This trolley combines the options of fixed shelves and sliding baskets. Can be configured with a variety of baskets to both sides, or the basket / shelf combination. Available in Nickel Chrome only.

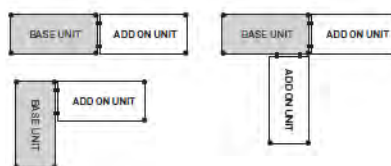

Modular Shelving System

Rapini Static units can be configured in multiple variations using S Hooks. Starting with a base unit, extra units can added side to side or back to back.

Please contact our sales department to assist you with your requirements



R2102 | Suture Trolley

Size illustrated: 460 x 1220 x 1760H mm

Suture Trolley features the unique slanted display shelves ideal for dispensing and storing of sutures or other boxed items. Can be configured with slanted or flat shelves. Available in Nickel Chrome only.


Three shelf sizes available:

- R2101 460 x 910mm
- R2102 460 x 1220mm
- R2103 460 x 1525mm



Single row in-line units

Double row in-line units

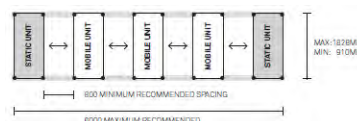

In Line Storage System

The principle of in-line storage systems is to have a number of mobile bays, running between two static end bays.

Allowance must be made for a minimum of 800mm aisle spaces. Our normal range of shelf sizes gives the opportunity to erect the most efficient storage system to suit all applications.

Please contact our sales department to assist you with your requirements